

SPARK PLUG WIRES

Choice of spark plug wires is an important consideration when using an electronic ignition system. **You must use carbon core resistor or Spiral wound spark plug wires with at least 800 Ω per foot resistance. Failure to observe these precautions will damage Ignition & Void the Warranty.**

SPARK PLUGS

You must use a resistor spark plug with electronic ignitions. Stock spark plugs are resistor type plugs and will work. Spark plug gap should be limited to as small as possible, while still maintaining performance.

A wide spark plug gap can cause the following problems: Hard cold starting, misfires during rich or lean fuel conditions, and reduction of upper rpm range.

Initial settings for spark plug gaps are:
1 Plug per cylinder Multi-Spark 0.025"-0.032"


Many things effect spark plug gap settings:

Compression Ratio: The higher the engine compression, the more voltage required to fire the plug, and the narrower the plug gap should be.

RPM: The higher the rpm's the less time the coil has to charge to break over voltage or complete saturation. A narrower spark plug gap will help high rpm stability.

Multi-Spark: To maintain a good secondary spark within a wider rpm range it is wise to run a narrower spark plug gap. It is better to precisely place two stable, consistent sparks than to fire one wider spark that may cause misfires in rich or lean conditions, or from any of the above reasons.

Encoder Installation and Cam end play

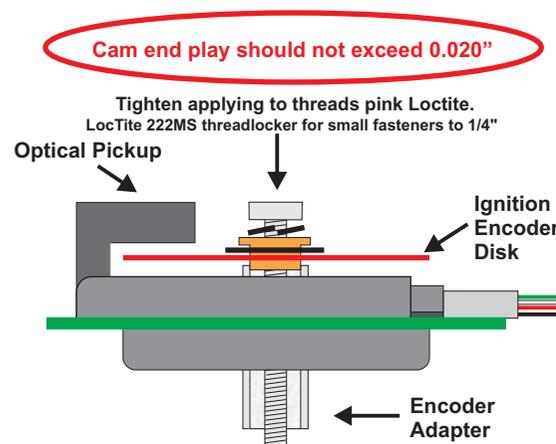

OWNERS MANUAL

All information contained in this owner manual is the property of P. A. Ignition Co., Inc. and cannot be duplicated in whole or in part by any means or disseminated or distributed without the prior written consent of P. A. Ignitions Co., Inc. The information in this manual has been carefully compiled and checked for accuracy and is believed to be correct. However, P. A. Ignition Co., accepts no responsibility for inaccuracies which may occur. All specifications in this manual are subject to change without notice.

Power Arc Ignitions Co., Inc.
2518 N.E. 102 Ave.
Ankeny, IA 50021
(515) 964-7608

The following customer actions automatically voids the warranty.

1) Use of any other spark plug wires other than resistor type wires with at least 4,000 ohms of resistance. 2) Use of non-resistor spark plugs. 3) Drilling or cutting of any kind into the module 4) Incorrect wiring of the module. 5) Use of module on systems with defective charging systems. 6) Use of defective coils. 7) Directly shorting the coil output wires to +12 VDC. 8) Physical damage to the ignition. 9) Any other items covered in the warranty & instruction manual.


LIMITED WARRANTY

P. A. Ignition Co., Inc. warrants to the original retail purchaser of a Power Arc IDS ignition that it will, free of charge, repair or replace at its own option, the product if returned to P. A. Ignition Co., Inc. within 6 months after purchase and if found by P. A. Ignition Co., Inc. to be defective in material or workmanship. This warranty is not transferable by the purchaser and shall be voided: if alterations not authorized by P. A. Ignition Co., Inc. are made in the equipment or if the serial number or date of manufacture has been altered, defaced or removed. Nor does this warranty apply: if the equipment has been subjected to accident, misuse, improper hookup, damaged by flood, fire, or act of God, or has been used on circuits or voltages other than those indicated in its instruction manual. If the equipment is found to be defective in materials or workmanship the equipment will be returned and P. A. Ignition Co., Inc. will pay the return shipping (this does not include next day shipping, second day shipping, shipments outside of the continental U. S. A. or shipments outside of the U.S.A.). All warranty work outside of the U.S.A. must include prepayment of return shipping. Customs, duties or tariffs are not covered by this warranty. If the equipment is found to be defective but is due to customer misuse (as described in warranty) P. A. Ignition Co., Inc. will notify the customer and if the customer wants the defective equipment returned P. A. Ignition Co., Inc. will return the equipment C.O.D. freight. If the equipment is found to be in operational order when returned to the factory P. A. Ignition Co., Inc. will return the module with a \$30.00 service charge plus freight and C.O.D. Charges.

Any module returned under the warranty must include note of explanation of failure and be accompanied by a dated bill of sale.


P. A. Ignition Co., Inc. warranty obligations are limited to those set forth herein and no other obligations, expressed or implied, are assumed by P. A. Ignitions Co., Inc.

Some states do not allow the exclusions or limitations of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

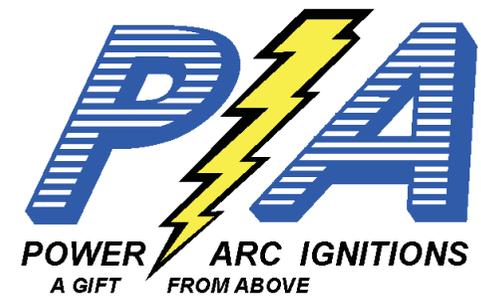

POWER ARC IDS-C2 SV 90° OWNER'S MANUAL

C2 SV
S
F
I
N
G
L
E
F
I
R
E

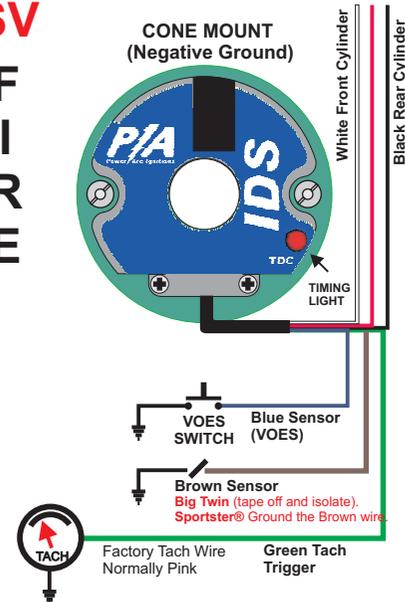


IDS-C2 Super Vee Ignitions System

- Capable of 3 Sparks / Compression Stroke
- Programmed Placement of Multi-Spark sparks
- Automatic Coil Shutoff
- Cam based sensor pickups
- Single or Dual Fire Operation
- 2 Digital sensor inputs
- Precision Rev limiter
- Static Timing Light
- Stainless Steel Encoder Disk
- Corrected Tach Output

POWER ARC IGNITIONS CO., INC.
2518 N. E. 102 AVE.
ANKENY, IA 50021
(515) 964-7608



<http://www.powerarc.com>
PATENT #4,951,629 OTHER PATENTS PENDING

SEE COIL WIRING DIAGRAM FOR DUAL FIRE OPERATION.

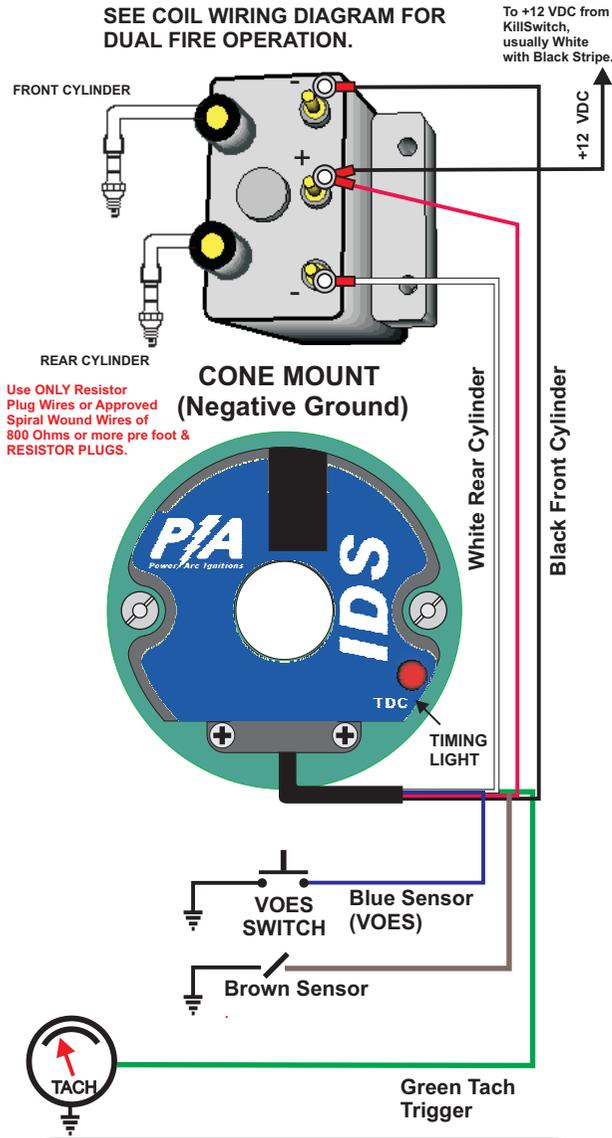

CONE MOUNT (Negative Ground)

Use ONLY Resistor Plug Wires or Approved Spiral Wound Wires of 800 Ohms or more pre foot & RESISTOR PLUGS.

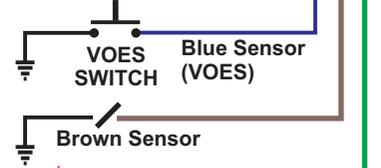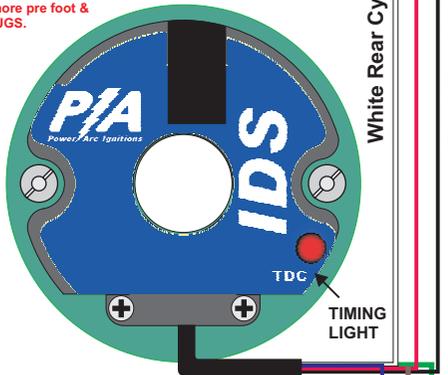

Spark Plug Wire Guidelines

1. Use only resistor (carbon core) spark plug wires & resistor spark plugs.
2. Do not use spiral wound suppression or solid type spark plug wires. If the plug wires are short and resistance is less than 4,000 ohms use a resistor plug cap/boot.
3. Failure to observe these precautions may cause ignition malfunction and could damage the ignition module or coil.

Coil Hookup Guidelines


1. Use of coils other than PA coils will result in loss of Multi-Spark capabilities.
2. Do not touch the Black or White coil output wire to +12 vdc.
3. A total of 2.8 ohms is the minimum allowable coil resistance.
4. Do not hook up coils with power (12 vdc) applied to the coils

WARNING: Do not touch coil output wires (White & Black) To +12. DO NOT USE SOLID OR SPIRAL WOUND SUPPRESSION SPARK PLUG WIRES. USE RESISTOR WIRES ONLY. FAILURE TO OBSERVE THESE PRECAUTIONS WILL DAMAGE IGN. & VOID THE WARRANTY.

***See Encoder Installation and Cam end play on back page.**


1. Remove all components from the ignition cone cam cover or distributor, exposing the shaft end.
2. Mount Ignition Coil in suitable location.
3. Pull ignition wire through wire hole. Make sure not to run wiring near high heat areas of the motorcycle, such as the exhaust system. Rock the ignition into cam cover or distributor.
4. Insert the lock down screws & tighten and rotate the distributor if used to best location for the wires to exit and lock distributor down.
5. Hook ignition positive (red) wire to the ignition supply, usually at the coil positive (center terminal) with the kill or ignition switch wire.
6. Hook the green wire to the tach trigger wire of motorcycle if used.
7. Insert the encoder standoff through the center hole of the ignition step side out. Set the Encoder Disk centered on the Standoff. Put the locking washer and flat washer on the bronze flange bushing and push thru the Encoder Disk. Apply pink Loctite to the screw and insert the screw with flange bushing and washer and lightly tighten, making sure the optical encoder is centered by the step in the washer (see diagram below).
8. Rotate the engine to **TOP DEAD CENTER FRONT CYLINDER COMPRESSION STROKE**. If you engine does not have Front Cylinder Top Dead Center timing marks, it may be necessary to use a dial test indicator to locate TDC.
9. Turn the Ignition and Kill Switch on and rotate the Optical Encoder Counter in the Opposite direction of Normal rotation until the Static Timing LED lights and stop. Holding the Optical Encoder tighten the Adapter Hex screw firmly to hold the Encode wheel in place. Recheck top dead center timing mark to make sure the timing has not moved. Do finish or fine adjustments by rotating Distributor when Optical Encoder has been firmly tightened.
10. Hook the White wire to the rear coil & the Black wire to the Front cylinder coil. Do not hook the White or Black wire to positive.
11. Start the Engine.

Encoder Standoff For Super Vee in Cam Cover - Standoff cut to 0.865" Distributor - Standoff cut to 1.000"

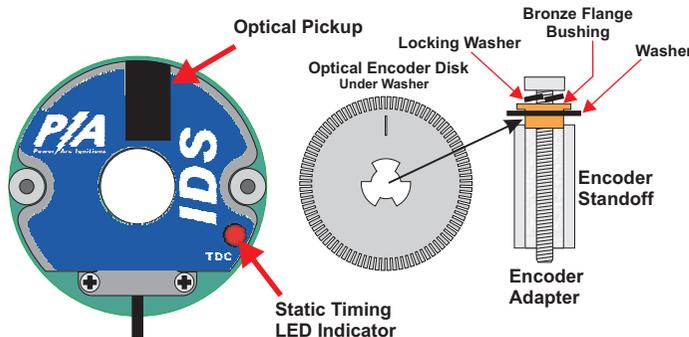

COIL HOOKUP DRAWINGS

Single Fire, 1 Plug/Cylinder, 3 Ohm, SF Coil

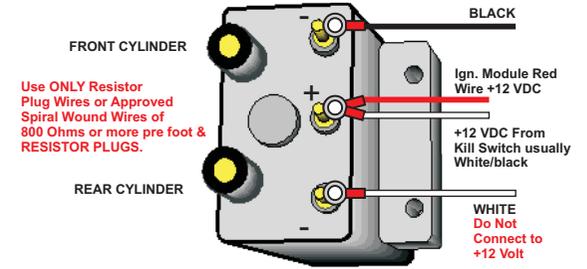

2 Cylinder, 1 Plug/Cylinder 3Ω ST Coil (Single Fire)

