


BASIC OPERATION

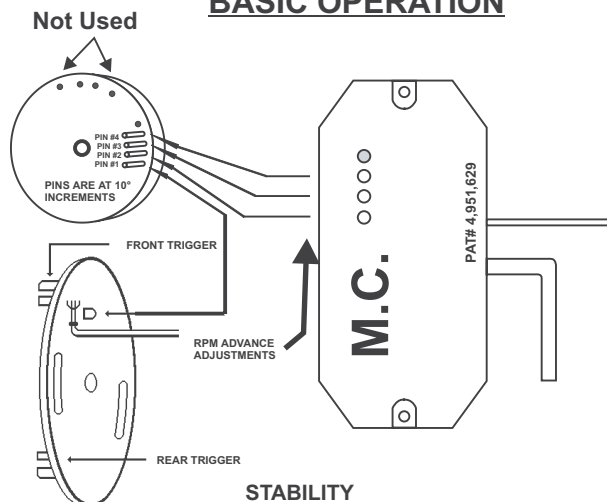

Most electronic ignitions used to date sense crank angle by using a Hall Effect pickup, which is a magnetic type sensor. This type of sensor is inherently unstable & is effected by metal mass, motion & heat. The Hall Effect sensor is unstable causing engine inefficiencies & wear, due to internal vibration caused by unstable firing of the spark plug. An example of this instability would be the movement seen of the TDC timing mark on the flywheel when using a timing light. The use of a magnetic type sensor can be off a much as $\pm 7^\circ$ giving an overall deviation of 14° . With an optical sensor you are breaking a light beam and light beams do not deviate! This extreme stability allows the engine to accelerate at a much greater speed, reduces engine wear, allows for smoother operation & transfer of power.

PROGRAMMABILITY

The Power Arc II Ignition has 4 pins passing through an optical sensor, which are counted. The first pin to pass through the sensor is the (#4 pin) & is the most advanced point and the last (#1 pin) is your static timing. The pins have a 10° crank spread between each. When the engine is started the control circuitry counts pins 4, 3, 2, 1 and fires the spark plug when pin #1 is counted. As the engine speed is increased to 500 rpm's (starter over ride) the control circuitry counts pins 4, 3, 2 and fires when pin #2 is counted. As the pins have a 10° crank angle separation the engine is advanced 10° above the static timing. When the engine achieves 1500 rpm's the control circuit counts pins 4 & 3 then firing when the #3 pin is counted, advancing the engine timing 10° more or 20° total over static. When the engine reaches 2100 rpm's the spark plug is fired when the #4 pin is counted giving 30° total advance over static timing. If static timing is set at 5° BTDC you would see an advance to 15° at 400 rpm's, 25° at 1500 rpm's and 35° at 2100 rpm's. The points at which each step of curve is achieved is altered by the adjusters on the top of the module.

OWNERS MANUAL

All information contained in this owner manual is the property of M. C. Ignition Co., Inc. and cannot be duplicated in whole or in part by any means or disseminated or distributed without the prior written consent of M. C. Ignitions Co., Inc. The information in this manual has been carefully compiled and checked for accuracy and is believed to be correct. However, M. C. Ignition Co., accepts no responsibility for inaccuracies which may occur. All specifications in this manual are subject to change without notice.

M. C. Ignitions Co., Inc.
2518 N.E. 102 Ave.
Ankeny, IA 50021
(515) 964-7608

THE FOLLOWING CUSTOMER ACTIONS AUTOMATICALLY VOIDS THE WARRANTY

1) Use of any other spark plug wires other than resistor type wires with at least 3,000 ohms of resistance. 2) Use of non-resistor spark plugs. 3) Drilling or cutting of any kind into the module or trigger plate. 4) Incorrect wiring of the module. 5) Use of module on systems with defective charging systems. 6) Use of defective coils. 7) Directly shorting the coil output wires to +12 VDC. 8) Physical damage to the adjusters (potentiometers). 9) Any other items covered in the warranty.

LIMITED WARRANTY

M. C. Ignition Co., Inc. warrants to the original retail purchaser of a Power Arc II ignition that it will, free of charge, repair or replace at its own option, the product if returned to M. C. Ignition Co., Inc. within 6 months after purchase and if found by M. C. Ignition Co., Inc. to be defective in material or workmanship. This warranty is not transferable by the purchaser and shall be voided: if alterations not authorized by M. C. Ignition Co., Inc. are made in the equipment or if the serial number or date of manufacture has been altered, defaced or removed. Nor does this warranty apply: if the equipment has been subjected to accident, misuse, improper hookup, damaged by flood, fire, or act of God, or has been used on circuits or voltages other than those indicated in its instruction manual. If the equipment is found to be defective in materials or workmanship the equipment will be returned and M. C. Ignition Co., Inc. will pay the return shipping (this does not include next day shipping, second day shipping, shipments outside of the continental U. S. A. or shipments outside of the U.S.A.). All warranty work outside of the U.S.A. must include prepayment of return shipping. Customs, duties or tariffs are not covered by this warranty. If the equipment is found to be defective but is due to customer misuse (as described in warranty) M. C. Ignition Co., Inc. will notify the customer and if the customer wants the defective equipment returned M. C. Ignition Co., Inc. will return the equipment C.O.D. freight. If the equipment is found to be in operational order when returned to the factory M. C. Ignition Co., Inc. will return the module with a \$15.00 service charge plus freight and C.O.D. Charges.

Any module returned under the warranty must include the trigger plate, note of explanation of failure and be accompanied by a dated bill of sale.

M. C. Ignition Co., Inc. warranty obligations are limited to those set forth herein and no other obligations, expressed or implied, are assumed by M. C. Ignitions Co., Inc.

Some states do not allow the exclusions or limitations of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



POWER ARC II OWNER'S MANUAL

ADJUSTABLE SINGLE FIRE
ELECTRONIC IGNITION SYSTEM FOR
HARLEY-DAVIDSON MOTORCYCLES


- ADJUSTABLE ADVANCE CURVE
- EXTREME SPARK STABILITY
- MULTI-SPARK CAPABILITY
- STREET LEGAL (CARB #D-351)
- RETARD CONTROL WIRE
- ADJUSTABLE REV LIMITER
- LED STATIC TIMING INDICATOR
- CORRECTED TACHOMETER OUTPUT

M. C. IGNITIONS CO., INC.
2518 N. E. 102 AVE.
ANKENY, IA 50021
(515) 964-7608

PATENT #4,951,629 OTHER PATENTS PENDING

IGNITION WIRING DIAGRAM

TO USE A DUAL FIRE COIL
SEE COIL HOOKUP SECTION

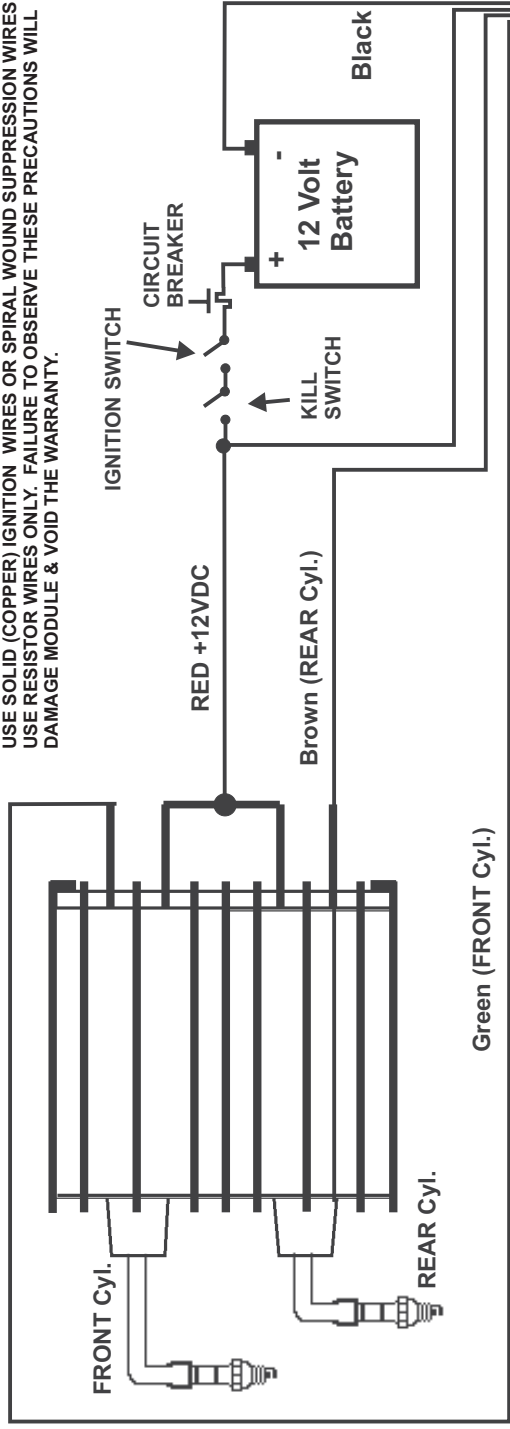

WARNING



DO NOT TOUCH COIL OUTPUT WIRES (GREEN & BROWN) TO +12 VDC. DO NOT USE SOLID (COPPER) IGNITION WIRES OR SPIRAL WOUND SUPPRESSION WIRES. USE RESISTOR WIRES ONLY. FAILURE TO OBSERVE THESE PRECAUTIONS WILL DAMAGE MODULE & VOID THE WARRANTY.

6 CONDUCTOR
CABLE


- RED- +9VDC
- BLACK- GROUND
- BLUE- VOES
- WHITE- TACH TRIG.
- GREEN- FRONT CYL.
- BROWN- REAR CYL.

COIL SATURATION PIN
NOT USED ON PA I & II

Green (FRONT Cyl.)

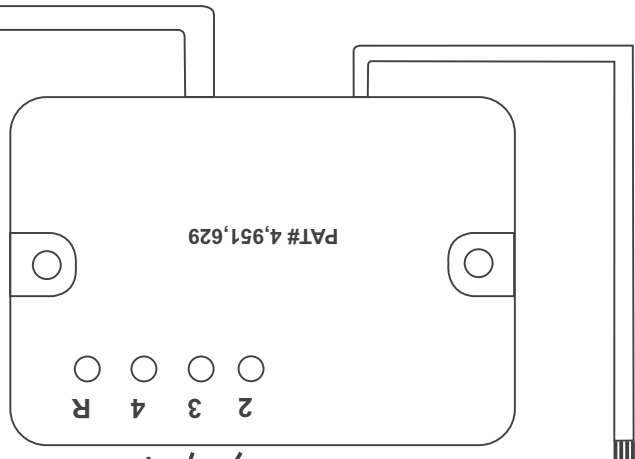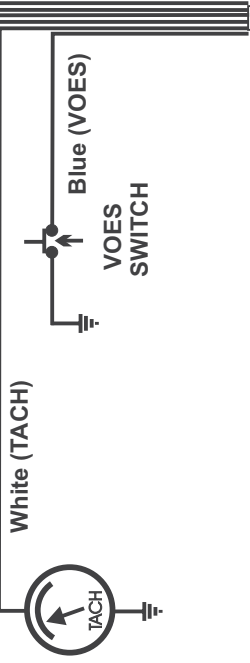

RPM ADVANCE
ADJUSTMENTS
PEGS #2-#4
PEG #1 STATIC

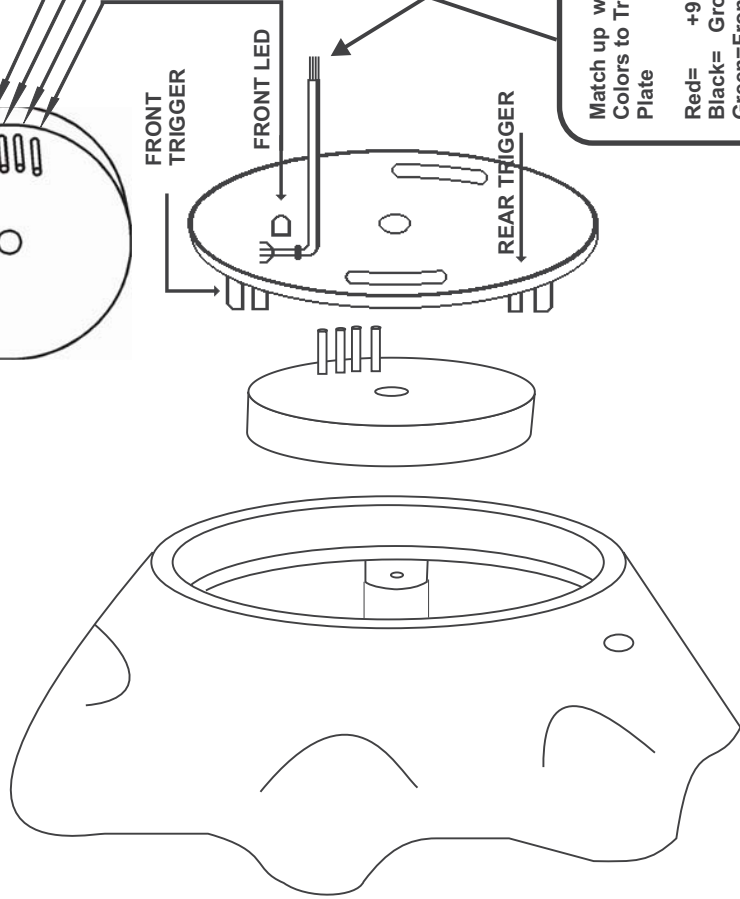

Match up wire
Colors to Trigger
Plate

- Red= +9 vdc
- Black= Ground
- Green= Front Cyl.
- White= Rear Cyl.

INSTALLATION INSTRUCTIONS

WARNING: DO NOT TOUCH COIL OUTPUT WIRES (GREEN & BROWN) TO +12 VDC. DO NOT USE SOLID CORE SPARK PLUG IGNITION WIRES OR SPIRAL WOUND SUPPRESSION SPARK PLUG WIRES, USE RESISTOR WIRES ONLY. FAILURE TO OBSERVE THESE PRECAUTIONS WILL DAMAGE MODULE & VOID THE WARRANTY.

Locate a desirable position for location of the ignition module. Use screws to hold the module in place. Make sure the ignition key is turned off & remove ground at battery. Connect ignition system wires as indicated in wiring diagram. The HD stock wiring system uses a white wire for +12 VDC coming from the kill switch, this wire hooks to the +12 VDC of the coils and the #18 red wire of the module. Do not allow wiring to come into direct contact with high heat areas or to touch any moving parts of the motorcycle. When routing the wiring attempt to keep the wires as far as possible from the spark plug wires. When tightening down the factory wire retainer do not allow it to cut into the trigger plate wires, the retainer may have to be bent. Hook up the ground last after all other wiring is complete. Attaching the ground directly to the battery post is advisable. Wrap wiring with electrical tape and place heat shrink tubing around connections. If you're planning to use the mechanical simulator leave enough wire (4" to 6") to allow for placement of the trigger plate onto the simulator.

If you do not have a VOES switch or do not wish to use it, cut and strip the blue and black wires and crimp them into the supplied blue ring connector and connect to battery negative. **MODULE WILL NOT FULLY ADVANCE IF THIS IS NOT DONE.** The blue wire may be hooked to the stock VOES vacuum switch in heavy load situations, such as heavy dressers, or trailering. In most applications ground the blue wire. Do not hook tachometer output of module (white wire) to the coil, hook white wire to trigger input of tachometer. If you do not have a tachometer insulate the end of the wire and do not use. Install the trigger rotor using the supplied screw, lock washer and flat washer. Make sure to align the trigger rotor with the alignment slot on the end of the camshaft.


Pull the trigger plate control wire through the factory ignition systems access hole, solder each connection and place heat shrink tubing around each solder joint. Make sure to match up wire colors. Place heat shrink tubing around or wrap electrical tape around all four connections.

TOP DEAD CENTER TIMING METHOD:

Turn the engine over to the TDC mark of the compression stroke on the fly wheel. With the power on (+12 VDC), rotate the trigger plate all the way clockwise. Next, rotate the trigger plate (CCW) counterclockwise until the red LED static timing light on the #1 (front cylinder) trigger just begins to light. Lock down the trigger plate hold down screws. Recheck engine TDC mark to make sure no movement has occurred. Peg #1 will be set at approximately 8° BTDC. Additional adjustments may be made to meet your engines specific requirements.

QUICK TIME METHOD:

Place timing arrow as shown in drawing so that it points to dead center of the front hold down screw. The timing will be set at approximately 8° BTDC. If pointed approximately 1/16" below (clockwise) of dead center of front hold down screw. Timing will be set at approximately 12° BTDC. In the case of a sportster everything is rotated 90° clockwise with LED facing forward and hold down screws in the vertical position.

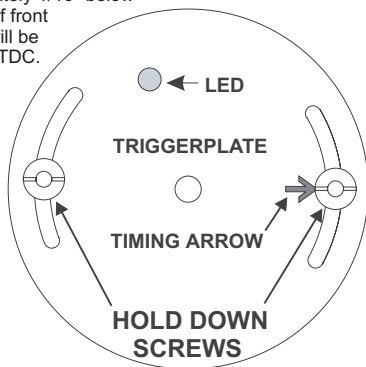

ADJUSTMENT PROCEDURE

ADVANCE CURVE HAS BEEN PRESET AT THE FACTORY
SEE BASIC OPERATION -PROGRAMMABILITY
FOR MORE INFORMATION

Note: During startup when pegs #2, #3, & #4 are not activated the ignition will fire at peg #1 which is set during static timing of the trigger plate. Peg location on the circumference of the rotor is what determines the amount of movement in degrees which will occur as each peg is activated. Ignition module adjusters are designed for occasional alignment of the ignition system. Excessive use of the adjustments may damage the adjusters (potentiometers). Do not pry on the adjusters.

NOTE: It is not necessary to turn all adjusters CCW when adjusting only one step of the curve. If LED is on corresponding step of the curve is activated.

Remove the rpm adjustment lid from top of module. Adjust the mechanical simulator (optional, refer to simulator manual for hookup and usage instructions) to the correct RPM setting for activation of peg #2 as registered on the tachometer. If no simulator is available the ignition may be adjusted while the engine is actually running.

Turn the #2 peg adjustment clockwise until the #2 peg red LED light just turns on.

Increase the RPM's, setting to the desired activation point of peg #3 and turn the #3 peg adjustment clockwise until the #3 peg red LED light just turns on.

Increase the RPM's, setting to the desired activation point of peg #4 and turn the #4 peg adjustment clockwise until the #4 peg red LED light just turns on.

Increase the RPM setting to the desired activation point of the rev. limit. Turn the adjustment clockwise until the green LED light turns on. Reinstall adjustment lid on module.

SEE PERFORMANCE TIPS FOR ADJUSTMENT OF MULTI-SPARK MODE

DESCRIPTION OF FUNCTIONS

Peg #2-#4 RPM Trip Point Adjustments- These adjustment determine at what engine rpm's the trigger rotor pegs will be engaged, advancing engine timing.

Rev. Limit- This adjustment limits the engine rpm's to a certain point. The ignition module is preset to 6300 rpm's. The stock Harley-Davidson valve lifter system should only be operated up to 6300 rpm's.

Low Vacuum Peg #4-#3 Retard- This control wire (blue) causes a peg #4 to #3 retard whenever it is ungrounded and would normally be used in conjunction with the vacuum switch located on late model motorcycles. The blue wire may be used with a switch to manually retard or advance engine. Whenever nitrous oxide is applied the blue wire should be ungrounded to retard timing. In drag racing applications when leaving the line at high rpm's, unground the blue wire to hold advance to step #3 and ground at higher rpm's to advance timing.

Coil/Battery Protection Circuit- When you turn your ignition on the green Rev. limit light on the module will light. This indicates that the coils are shut off and will not over heat. As the engine turns over the ignition senses camshaft rotation, energizing the coils.

SETTING MODULE FOR HIGH PERFORMANCE (MULTI-SPARK) OPERATION

IMPORTANT: The ignition has the ability to consume more fuel when set in the multi-spark mode. It maybe necessary to enlarge the fuel line size to the carburetor when used for off road racing.

1. With the ignition switch turned off adjust the #2 peg Rpm adj. 15 turns counter clockwise. The #2 LED (light) will never activate when module is set in multi-spark mode.

2. Turn the #3 peg Rpm adj. Clockwise until the LED light just turns on & then turn the adjuster screw CCW until the #3 LED just goes out and add 1/2 turn CCW from that point. The #3 peg LED (light) should be adjusted so it is off when initially turned on & while the starter is engaged. As soon as the engine starts the LED should light indicating advance. Start the engine & note when the #3 LED engages, if the #3 LED's comes on before the engine starts readjust the #3 adjuster CCW until set at starter over ride position.

#4 PEG & REV. LIMIT HAVE BEEN ALTERED & MUST BE READJUSTED

3. Start the engine or use a simulator and set peg #4 to the desired Rpm.

4. Using the simulator set the rev. limit adj. to the desired Rpm. To set to the 6300 Rpm setting to the adjuster 1/2 turn Clockwise.

Multi-Spark

During the intake cycle fuel is delivered via a carburetor or injection system and intake manifold into a combustion cylinder. Both of these delivery systems supply fuel to the cylinder in a droplet form, especially at lower rpm ranges. As the fuel is compressed turbulence in a circular fashion is created due to existing head designs. As the primary spark is discharged the concussion of the explosion combined with superheating of the combustion chamber turns the droplets of fuel into a hot vaporous gas. The flame front due to the rolling turbulence created by the heads moves away from the point of ignition to the face of the piston and to the outer cylinder walls. As the piston nears the top of the compression stroke the unburned vaporous gas is circulated over the spark plug, and a fuel roll stall occurs. At this point a second spark is discharged obtaining a secondary burn of the fuel that in a single spark ignition system would be trapped in the upper portions of the head and during the expansion portion of the power stroke would be unburned and then be cycled out during the exhaust cycle as emissions.

With the extreme stability of an optically triggered ignition system in a Multi-Spark mode the ability to add more fuel is possible to achieve higher horsepower outputs but there are considerations to look at when doing this

1) The extreme stability of a optically triggered ignition system has the ability to allow the engine to accelerate as much as 30% quicker requiring greater fuel flow to the carburetor. This coupled with enlarged jetting of the carburetor or increased fuel to the injectors means you must maintain a sufficient supply line from the fuel tank to the delivery system by use of an enlarged petcock and supply line or a fuel pump. An example would be that at higher rpm's you may use all the gas in the float bowl of your carburetor and create a lean run situation damaging the engine if fuel supply is not maintained.

2) If you have a sufficient fuel flow in a single spark mode you have enough to operate in the Multi-Spark mode without engine damage because you are burning residual fuel, even though your plugs may show a lean burn. This will normally show an increase in fuel economy, horse power and a reduction of emissions output. You could increase the fuel for more horsepower but you should be careful not to over fuel, because if the fuel is not burned by the secondary spark it is exhausted as burning fuel through you exhaust system increasing heat and reducing horsepower output because of an improper air/fuel mixture. This also results in increased emissions output which is unnecessary.

TROUBLE SHOOTING GUIDE

Voltage Test:

Load system by turning on lights & ignition. With negative terminal of volt meter attached to ground of module, check the voltage at the + (positive) of the battery & note. Then check the voltage at the + (positive) of the coils & note. Compare the two and there should be no more than 1 volt difference. If they show more than 1 volt difference check battery, ignition breaker, ignition switch & kill switch for high resistance opens.

NOTE: Perform above test first, no matter what the symptoms may be.

Problem: Only front or rear cylinder will fire.

- Bad coil, spark plug, or spark plug wire.
- No +12 VDC to coil + leads
- Module trigger wire not connected to coil
- Blockage of Front or Rear trigger on Plate (clean with alcohol)
- Pinched or shorted green or brown coil trigger wire

Problem: Hard Starting or wants to start when starter button released

- Weak or undersized battery
- Poor connections in ign. circuit to coils (breaker, ign. & kill switches)
- Spark plug gap to large
- Improper coil chose

Problem: Erratic operation, tach bounce

- Solid or spiral core spark plug wires being used
- Pins on rotor rusted or blocked by debris
- High resistance connection on ground loop from ignition module
- Blockage of triggers on trigger plate

Problem: Green LED on module lights but trigger plate LED static

- timing LED does not
- Black - (ground) to trigger plate has been touched to + (positive), ground black wire on trigger plate side to frame & retest

Problem: Trigger Plate LED stays lighted

- Blockage of trigger pickup on trigger plate (clean with alcohol)
- Defective Trigger Plate

Problem: Kicks back when starting, runs similar to stock ignition

- Static timing too advanced (see quick time method)
- #2, #3 or #4 LED activates while engine is being started

Problem: #4 LED on module will not light

- Blue VOES wire on module not grounded
- Defective VOES switch

Problem: Tail pipes blue, hollow sound in pipes, runs sluggish

- Trigger plate timing wrong, too far retarded (see quick time method)

Problem: Plugs fire, occasional back fire, wont start

- Timing 180° out, reverse brown & green wires (see quick time method)

Problem: Pinging when leaving the line

- Timing to far advanced (see quick time method)

Problem: Pinging in the midrange

- Pins in rotor located in the wrong position (too much advance)
- #4 advance pin coming in to soon, raise advance point
- Hookup VOES switch & retry, especially when heavily loaded

BEFORE RETURNING ANY MODULE OR TRIGGER PLATE INSPECT THE 4 & 6 CONDUCTOR CABLES ON MODULE & 4 CONDUCTOR CABLE ON TRIGGER PLATE FOR ABRASION, CUTS OR CRUSHING AS THIS IS A COMMON CAUSE OF FAILURE.

NOTE: Any module returned under warranty must include the trigger plate, note of explanation of failure & be accompanied by a dated bill of sale. If out of warranty a \$21.00 Charge to cover testing, shipping & handling should accompany the return or a COD charge will be added.


ADVANCE CURVE GRAPHS

SINGLE SPARK

NOTES:
(Set at Factory to This Curve)
All RPM Advance Setting Varied by Adjusters Located on Top of Module Case.


GRAPH A

(5° Startup & Idle) 4 Step Curve
30° Total Advance Above Static

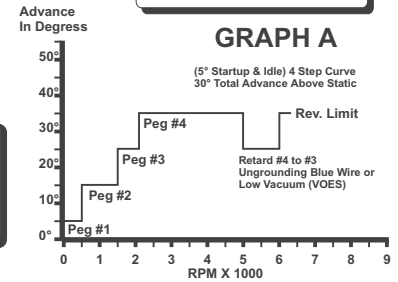


RPM ADVANCE SETTINGS:

PEG #2 - 500 RPM
PEG #3 - 1500 RPM
PEG #4 - 2100 RPM
REV LIMIT - 6300 RPM

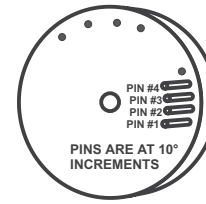

RPM ADVANCE SETTINGS:

PEG #2 - Locked Out
PEG #3 - 500 RPM
PEG #4 - 2100 RPM
REV LIMIT - 6300 RPM

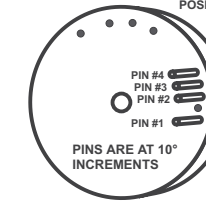

RPM ADVANCE SETTINGS:


PEG #2 - 500 RPM
PEG #3 - 1500 RPM
PEG #4 - 3000 RPM
REV LIMIT - 6300 RPM

MULTI-SPARK MODE


NOTES:
Static Timing (Peg #1) Must be Set
Between 5°-10° BTDC for Best
Multi-Spark Performance

GRAPH B

(Fires at 5° Static & 25° at Idle)
3 Step Curve 30° Total Advance Above Static

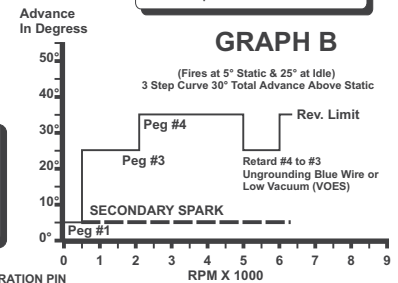

COIL SATURATION PIN
INSTALLED IN RECOMMENDED
POSITION

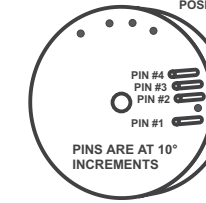

RPM ADVANCE SETTINGS:


PEG #2 - 500 RPM
PEG #3 - 1500 RPM
PEG #4 - 3000 RPM
REV LIMIT - 6300 RPM

SINGLE SPARK

NOTES:
Do Not Use in Multi-Spark Mode
Unless Light Load Conditions
(Light Bike Light Rider)

GRAPH C

(5° Startup) 4 Step Curve
40° Total Advance Above Static

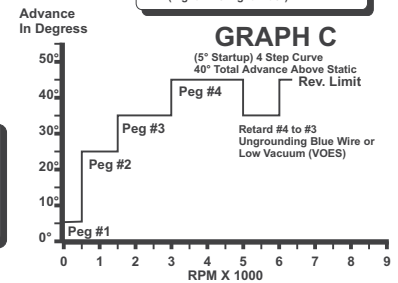

GRAPH A: This setting will work with most engines, giving a 30° overall advance above the static timing or an overall timing of 35° at 2100 Rpm's, if static timing is set at 5°. If more advance is needed for top end performance the trigger plate may be rotated clockwise. If pinging is noticed at take off (to much static timing) or static timing exceeds 15° you should use GRAPH C.


GRAPH B: This setting will provide the most benefit to any engine but may require some carburetor tuning. See (Setting Ignition for High Performance Multi-Spark Operation) for an explanation of Multi-Spark.

GRAPH C: This setting works well with most Evo engines which normally require more advance at upper rpm's. Notice pin #4 is adjusted so the engine will not advance to 45° until 3500 rpm's is achieved. This may be adjusted in to fit your engine, i.e., if you experience pinging in the midrange raise the rpm activation point of step #4.


MULTI-SPARK SHOULD NOT BE USED WITH GRAPH C: unless you have a light bike (Sportster) & a light rider or for drag racing, leaving line at high rpm's. GRAPH A: This setting will work with most engines, giving a 30° overall advance above the static timing or an overall timing of 35° at 2100 Rpm's, if static timing is set at 5°. If more advance is needed for top end performance the trigger plate may be rotated clockwise. If pinging is noticed at take off (to much static timing) or static timing exceeds 15° you should use GRAPH C.

COIL HOOKUP DRAWINGS

POWER PACK II (M. C. IGNITIONS) SINGLE FIRE COIL

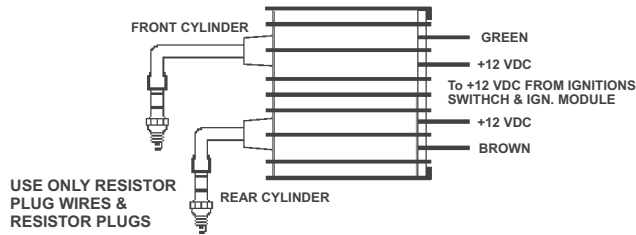

Two Plugs per Cylinder 12 VDC 3 Ohms Single Fire Coil

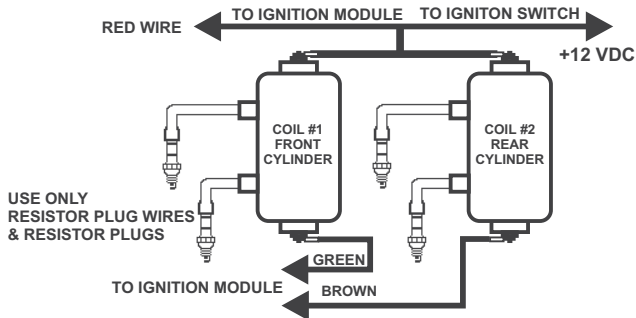

COIL HOOKUP GUIDELINES

1. USE ONLY RESISTOR PLUGS & RESISTOR PLUG WIRES EVEN WHEN GROUNDING OUTPUTS ON TWO OUTPUT COILS FOR SINGLE OUTPUT USE.
2. DO NOT TOUCH THE GREEN OR COIL OUTPUT WIRES TO +12 VDC.
3. A TOTAL OF 2.8 OHMS IS THE MINIMUM ALLOWABLE COIL RESISTANCE.
4. DO NOT HOOK UP COILS WITH POWER (12 VDC) APPLIED TO THE COILS & IGNITION MODULE.
5. BE SURE THE COIL USED DOES NOT REQUIRE A BALLAST RESISTOR, IF IT DOES, IT MUST BE USED.
6. MAKE SURE NOT TO RUN WIRING NEAR HIGH HEAT AREAS OF THE MOTORCYCLE, SUCH AS THE EXHAUST SYSTEM.
7. USE ONLY NEW OR KNOWN TO BE GOOD COILS.